



REMOVE EXCESS SEALANT AND MASKING

Excess sealant must be removed promptly with a suitable clean-up solvent recommended for use on both the counter/benchtap and stainless steel to ensure damage does not occur.



PLUMBING & TAPWARE

IMPORTANT - Connections to plumbing should always be done by a licensed plumber. Fit supplied basket wastes to sink bowls. Install tapware according to manufacturers instructions.

If 2 or more individual basins/bowls are under-mounted, a minimum distance of 3 1/2" (90mm) is required between the basins/bowls. The counter/benchtap supplier is to determine the support method required.

It is essential that the installation is waterproof and carried out in accordance with these instructions. Tasman Sinkware will not be held responsible for any damage caused by leakage or faulty installation.

CARE INSTRUCTIONS FOR YOUR SONETTO STAINLESS STEEL SINK

AVOID CONTACT WITH ROUGH OR DIRTY SURFACES as new polished stainless steel will show scratches!



DO's

- Clean with soap & water (towel dry)
- Clean along the grain of the Stainless Steel
- Use a soft brush or sponge (old tooth brush)
- Wipe over with a glass cleaner (Windex is very good)
- Polish with a metal polish paste (Autosol / Brasso)
- Use a Liquid cleaner (Bon-Ami or Jiff)
- Use a granulated stainless steel cleaner (Esstele)



DO NOT's

- NEVER use Steel wool
- Beware of harsh liquid cleaners
- Beware of grit within cloths and mineral deposits within water
- Avoid prolonged exposure to acids from Fruit, Fruit juices, Salts, Spirits, Bleach, Tea-bags
- Avoid prolonged contact with ordinary steel which can rust Tin Cans, Steelwool
- Do not keep harsh (acids or chlorine) chemicals under sink / laundry tub
- Do not leave chlorine/chloride chemicals on stainless steel surface
- Do not leave liquid soaps & cleaners to dry on stainless steel
- Do not use bleaches (White King, Domestos, Clorox)

INSTALLER - PLEASE READ & FOLLOW THESE INSTALLATION INSTRUCTIONS

FOR UNDERMOUNT SINKS

Please retain for consumer as care instructions are included



CHECK MODEL

The model number on the sink packaging must match the model of sink the customer ordered. **Do not install if incorrect.**



CHECK THE CONDITION

Inspect the sink for any visible defects. **Do not install the sink if defects are found.** Contact your sink retailer / point of purchase.



AVOID CUTS

The perimeter and punch-outs on the sink may contain sharp edges. Handle the sink carefully to avoid personal injury.



AVOID SCRATCHES

Stainless steel can be scratched if proper care is not taken during installation.

IT IS HIGHLY RECOMMENDED THE ACTUAL SINK BE PRESENT AT TIME OF CUTTING

MATERIALS FOR FITTING THE UNDERMOUNT SINK:

- **Sonetto sink** includes mounting clips, basket wastes and other accessories (depending on model).
- **These Installation Instructions**
- **Level** to check counter/benchtap & sink is installed level
- **Flat head screwdriver** (large - to tighten basket wastes)
- **Suitable sealant and fastening materials** (neutral-cure silicone sealant and structural epoxy or hardware)
- **Masking material** to protect counter/benchtap and sink from excess sealant
- **Clamping Mechanism** (such as threaded rod and timber bearers)
- **Additional Mounting Hardware** if fitting into thinner material. The instructions for bolting the sink require a minimum counter/benchtap thickness of 25mm / 1". Different hardware or packing materials will be needed for thin counters/benchtaps.



Download cutout template files (PDF, DWG & DXF) from our website.

Any advice, recommendation, information, assistance or service provided by Tasman Sinkware in relation to goods manufactured by it or their use and installation, is given in good faith and is believed by Tasman Sinkware to be appropriate and reliable. However, any advice, recommendation, information, assistance or service is provided by Tasman Sinkware without responsibility or liability.

AUSTRALIA
Head Office &
Manufacturing Plant
Tasman Sinkware Pty Ltd
Regency Park SA

Phone: +61 8 8348 6444

Fax: +61 8 8348 6495

Email: sinkware@tasbuildpro.com.au

www.sonettosinks.com

Tasman Sinkware
is a division of
Fletcher Building




NORTH AMERICA DISTRIBUTORS

Andrew Sheret LTD
7434 Edmonds St, Wholesale
Counter, Burnaby, BC V3N 1A8,
Canada
Phone: 604-521-0788

Mega Western Sales LLC
6861 Walker St, La Palma,
CA 90623, USA
Phone: 310-323-7900

FOLLOW THESE STEPS TO INSTALL THE SONETTO UNDERMOUNT SINK

IF COUNTER / BENCHTOP IS SUPPLIED WITH CUT-OUT, SKIP STEPS MARKED WITH*



CHECK SPACE

Ensure there is adequate space for tapware (including a splashback if specified). Check space for installation (underneath) and operation (above). Particular care must be taken when a thick splash back is used (it may interfere with tapware location and operation). Ensure the cabinet will not foul the sink mounting flange or basins.



TEMPLATE *

Cut out templates for your Sonetto sink are available online at sonettosinks.com. Use the product model number to find the template. Some sink templates apply to both left-hand and right-hand modelssinks. Ensure template is correct way around for your model.




MARK CUT OUT *

Carefully mark out the template (or follow drawing instructions) making allowance for any additional polishing back that is required after cutting. **NOTE: THE TEMPLATE IS THE EXACT FINISHED CUT-OUT SIZE REQUIRED.**




CUT & FINISH HOLE *

Drill pilot holes to accept an appropriate cutting tool for the counter/benchtop material (wear suitable personal protection equipment). Cut inside the mark, allowing sufficient room for any polishing back. **Note: Accuracy is essential to ensure the bowl / basin and accessories fit correctly.**



TRIAL FIT THE SINK

Carefully position the sink against counter/benchtop to make sure it fits the cut-out correctly. If the fit is not correct, remove the sink and proceed with remedial work. Perform another trial fit after corrections have been made.

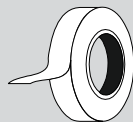


MASKING

To prevent sealant overrun, it is recommended that both the inside edge of the basin and the edge of the cut-out is covered with a suitable masking tape.




APPLY SEALANT

Apply suitable sealant recommended for both the counter/benchtop material being used and for stainless steel. Neutral-cure sealant will not damage stainless steel. It may be easier to apply sealant after preparing your clamping equipment. Do not allow the sealant to dry before the sink is clamped to the counter/benchtop.

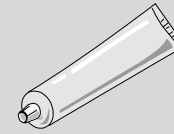

ADDITIONAL FASTENING


The sealant alone may appear to bond the sink to the counter/benchtop. However, when installing your Sonetto undermount sink, it is important to always use methods A, B or C (below) to locate the sink securely in the counter/bench top in conjunction with the sealant manufacturer's instructions.

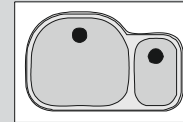


FITTING THE SINK

Position and align the sink correctly in the cutout (some threaded rod and timber bearers will help to clamp the sink in place) and either


'A' Sandwich Method: RECOMMENDED FOR BOTH THIN AND THICK COUNTER/BENCHTOP. Firmly fix a support board into / over the cabinet and cut the sink hole so that the sink flange will sit above the edge of the board. Slightly rout the edge so that the sink flange will sit flush with the top surface. Test for fit. Install sink and seal between flange and support board. Apply sealant to the underside edge of the cutout on counter/benchtop material and position it over the support board to sandwich the sink in place. Fasten the counter/benchtop securely.




Above shows sandwich method where sink is clamped between a lower support board (with routed edge) and the upper counter / benchtop using method A.

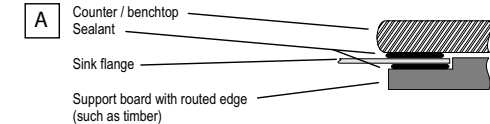


'B' Bond: For minimum 1" / 25mm thick material. Bond it to the underside of the counter/benchtop with a structural high strength epoxy compound. **NOT RECOMMENDED TO BE USED WHEN FITTING SINK TO THINNER COUNTER/BENCHTOPS.**

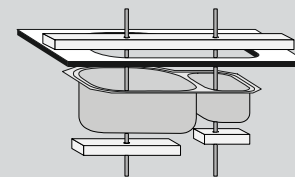

Above shows how threaded rod and timber bearers may be used to clamp the sink in place while fastening to the counter / benchtop using methods B and C.



'C' Bolt: For minimum 1" / 25mm thick material. Bolt it to the counter / benchtop using "molly" assemblies. Care must be taken during drilling and tightening to avoid cracking. **NOT RECOMMENDED TO BE USED WHEN FITTING SINK TO THINNER COUNTER/BENCHTOPS.**

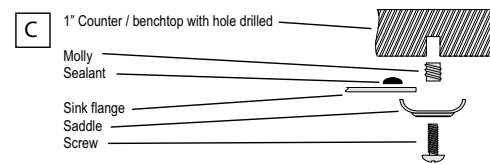

If you have any doubts, confirm the correct mounting method for your material by consulting the counter/benchtop supplier.